

# Product Guide

User and maintenance information

## Important information

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

## Customer centre

### United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

[www.communityplaythings.co.uk](http://www.communityplaythings.co.uk)

[sales@communityplaythings.co.uk](mailto:sales@communityplaythings.co.uk)



## J900 Community glider J920 Bench glider

### Recommended use

These durable hardwood gliders are designed for general nursery, classroom or home use.



### ⚠ WARNING

- ▲ Keep nearby children under supervision at all times.
- ▲ Keep children from reaching under glider. Although this product has been designed to eliminate major entrapment and pinch hazards, there are moving parts underneath.
- ▲ Weight limit:  
J900 109 kg  
J920 204 kg

### ⚠ CAUTION

- ▲ For indoor use only. Glider is not waterproof.

### Assembly

Your glider comes completely assembled and ready to use. Inside the carton are:

1. A glider complete with four cushions.
2. This product guide.

### Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or mal functions.

Remove the product from service when any condition develops that might make use unsafe.

### Accessories

J905 Glider covers for J900

J925 Bench glider covers for J920

### Cleaning

For everyday spills: Remove spills quickly with a dry cloth. Wipe spill area with clean water (fabric is waterproof), or follow cleaning instructions below.

The cushions should be cleaned every 3 months to avoid dirt build up. Powdered enzyme soaps provide the most effective cleaning results. Don't use solvent cleaners, as they may harm the fabric. Remove cushions from glider, and use a brush or soft towel with a soap solution to clean the fabric. Rinse the cushions with plenty of clean water after washing to remove any soap residue. Stubborn or oily stains can be removed with normal household rubbing alcohol and then washed with soap. A 10% bleach solution may be used for disinfecting purposes. The bleach solution should be removed quickly and completely with water, or the fabric may fade over time.

Clean the wood with a damp cloth and a mild detergent. Too much water may harm the finish of the wood.

### Construction

The wooden components are manufactured from durable hardwood and finished with a clear wood finish. All edges and corners are rounded for safety and ease of cleaning. The upholstery is CMHR polyurethane foam covered with Panvelle stretch™, a highly durable and stain resistant polyester fabric. The upholstery complies with Furniture and Furnishings (Fire)(Safety) Regulations 1988 as well as BS7176 Medium Hazard Category.

### User modifications

We cannot be responsible for modifications made by customers to our products in the field, without our supervision, testing, or evaluation.

### Ordering parts

To order replacement parts, contact your Customer centre with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by Community Playthings.**