

Product Guide

User and Maintenance Information

Important Information:
Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

Customer centre

United States

359 Gibson Hill Road

Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

www.communityplaythings.co.uk

sales@communityplaythings.co.uk



**community
playthings**

V43 Nursery Rocking Boat

Recommended Use

The Nursery Rocking Boat provides opportunities for teamwork, exercise and fun for up to four children at a time. When turned over, it can be used as a set of stairs. Recommended for children aged 2-6.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement therefore supervision is required at all times.
- ▲ Use only on a level surface away from stairs.

⚠ CAUTION

- ▲ For indoor use only. This Rocking Boat is not waterproof.

Maintenance

Periodically inspect for cracks, breaks, and loose or missing parts. Remove the product from service when any condition develops that might make use unsafe.

Cleaning

Wipe the Rocking Boat with a damp cloth and a mild detergent. Do not use excessive water.

Construction

The wooden components are manufactured from solid birch finished with a clear lacquer. All edges and corners are rounded for safety and ease of cleaning.

User modifications

We cannot be responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

