

Child's sofa and armchair

Recommended use

This sofa and armchair are designed for general childcare or classroom use. This product is suitable for children age 2–8 years.



J651 Child's sofa



J641 Child's armchair

⚠ WARNING

▲ This product is intended for use by children of immature judgement; therefore, adult supervision is required at all times.

▲ Weight limit: 180 kg

⚠ CAUTION

▲ For indoor use only. The sofa and armchair are not waterproof.

Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make use unsafe.

Construction

The wooden components are manufactured from hardwood with a clear finish. The upholstery is CMHR polyurethane foam covered with PANAZ FIFA, a highly durable and stain resistant polyester fabric. The upholstery complies with Furniture and Furnishings (Fire) (Safety) Regulations 1988 as well as BS7176 Medium Hazard Category.

IMPORTANT

Retain these instructions for future reference.

© 2009 by Community Products (UK) Ltd
DL45 Eu 0046 Revision 00

Cleaning

For everyday spills, remove spills quickly with a dry cloth and wipe area with clean water (fabric is waterproof), or follow cleaning instructions below.

The cushions should be cleaned every 3 months to avoid dirt build up. Powdered enzyme soaps such as Tide or Cheer provide the most effective cleaning results. Don't use solvent cleaners, as they may harm the fabric. Remove cushions and use a brush or soft towel with a soap solution to clean the fabric. Rinse the cushions with plenty of clean water after washing to remove any soap residue. Stubborn or oily stains can be removed with normal household rubbing alcohol and then washed with soap. Do not machine wash, as seams are not waterproof.

Clean the wood with a damp cloth and a mild detergent, then dry completely. Too much water may harm the finish of the wood.

A 10% bleach solution may be used as a sanitizer for the fabric and the wood. The bleach solution should be removed quickly and completely with water, and the item dried with a cloth.

User modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

Community Playthings

Brightling Road, Robertsbridge, TN32 5DR UK

Phone: 0800 387 457 Fax: +44 (0)1304 843 731

www.communityplaythings.co.uk sales@communityplaythings.co.uk