

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

CUSTOMER CENTRES

United States

359 Gibson Hill Road
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

www.communityplaythings.co.uk

sales@communityplaythings.co.uk



community playthings

A672 Large Clear Pan
A673 Large Teal Pan
A674 Small Clear Pan
A675 Small Teal Pan

Recommended Use

This Sand and Water Pan is designed for use in the appropriate size Community Playthings Sand & Water Table.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.

⚠ CAUTION

- ▲ Do not use the Sand & Water Table on a sloped or soft surface as it may make it unstable.

If your shipment is incomplete, please call your Customer Center.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

The pan can be washed with soap or mild detergent and water. Disinfectants can be used. Do not use abrasive cleaners.

Construction

The pan is made from aqua ABS or clear PETG.

The bung is made of soft plastic.

User Modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact your Customer Center with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.