

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

CUSTOMER CENTRES

United States

359 Gibson Hill Road
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

www.communityplaythings.co.uk

sales@communityplaythings.co.uk



community playthings

H540 Set of Ten Magnets

Recommended Use

Magnets provided for use in conjunction with Community Playthings magnetic whiteboard, on the Multi-Purpose Easel and the Art Island.

⚠ WARNING

▲ This product is intended for use by children of immature judgement. Supervision is required at all times.

Maintenance:

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. The housing of the magnets may crack if they are dropped repeatedly. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wipe magnets with damp cloth.

Ordering Parts

To order replacement magnets, contact your Customer Center.

Use only replacement parts supplied by Community Playthings.