

# Product Guide

## User and Maintenance Information

### IMPORTANT INFORMATION:

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

### CUSTOMER CENTRES

#### United States

359 Gibson Hill Road  
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

#### United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

www.communityplaythings.co.uk

sales@communityplaythings.co.uk



## Recommended Use


Recommended for children aged 1-8. This Sand and Water Table fills the need for a solid, durable, mobile place for Sand and Water play. Children will enjoy experimenting and playing with different materials.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.

### ⚠ CAUTION

- ▲ Do not use the Sand & Water Table on a sloped or soft surface as it may make it unstable.
- ▲ Water on the floor is slippery. Clean up spills.

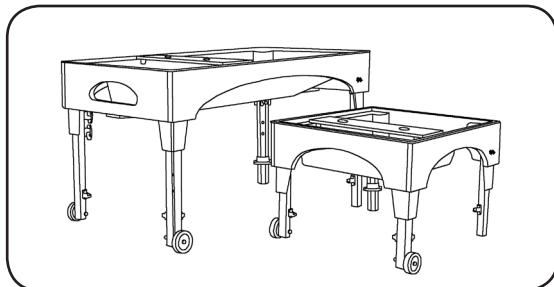

## Assembly

Equipment comes in a single carton. The carton contains:

1. Four legs, two with wheels
2. Table
3. Pan
4. Lid
5. Playshelf
6. Two top bungs (1 spare)

**If your shipment is incomplete, please call your Customer Center.**

1. You may find it easiest to assemble the table upside down.
2. The wheeled legs should be attached at one end of the table with the wheels pointing forward.
3. If you find the wheels are pointing sideways, exchange the positions of the two wheeled legs.
4. Locate each leg on a pair of bolts.
5. Note there are two height settings possible.
6. Tighten the knobs to secure the legs.

## A631 Large Clear Table A632 Large Teal Table A634 Small Clear Table A635 Small Teal Table

## Adjustments

To raise or lower the unit:

1. You may find it easiest to lay the table on its side or upside-down.
2. Undo the knobs attaching each leg, remove the leg and reposition on the other set of holes.
3. Tighten the knobs to secure the legs.

## Operation

The lid provides a clear working surface when play is finished. It can also be used to span between two units. The playshelf can be used across the pan to support buckets, funnels or sandpies. The pan is fitted with a hose for easy drainage. To drain the last water, raise one end of the pan. Bung is to prevent solids blocking drain hose. Dry wood components after use.

## Storage

The sand and water table and accessories should be stored indoors with the pan empty of water.

## Accessories

**CANOPY** fits on the large frame only.

**STORAGE RACK** mounts between the legs.

**FLOW PAN** adds an extra level and water flow possibilities.

**EXTRAS KIT** includes a length of clear hose, a funnel, a pulley and a mesh bag to further extend the play possibilities.

**SPARE PAN** gives the option of using different pans for different media. A spare pan can also be purchased to replace a worn out pan.

## Maintenance

Every six months check that the leg knobs are tight.

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

## Cleaning

The pan can be washed with soap or mild detergent and water. Disinfectants can be used. Do not use abrasive cleaners. Clean your table using a stiff brush and a minimum of soap and water. Let dry thoroughly.

# Page 2

## User and Maintenance Information (cont'd)

A631 **Large Clear Table**

A632 **Large Teal Table**

A634 **Small Clear Table**

A635 **Small Teal Table**

### **Construction**

The frame is made of resin impregnated plywood and corners of plated steel. The legs, and pan support on large table, are made of hardwood with a clear lacquer finish.

The playshelf is made of resin impregnated plywood.

The pan is made from aqua ABS or clear PETG.

The lid is made from durable hardwood plywood with a clear lacquer finish.

The bung is made of soft plastic.

### **User Modifications**

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

### **Ordering Parts**

To order replacement parts, contact your Customer Center with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by  
Community Playthings.**

### **CUSTOMER CENTRES**

#### **United States**

359 Gibson Hill Road  
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)

#### **United Kingdom**

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

[www.communityplaythings.co.uk](http://www.communityplaythings.co.uk)

[sales@communityplaythings.co.uk](mailto:sales@communityplaythings.co.uk)



# community playthings