

# Product Guide

User and maintenance information

## IMPORTANT INFORMATION:

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

## CUSTOMER CENTRES

### United States

359 Gibson Hill Road  
Chester, NY 10918  
Office hours: 9-5 EST  
Phone (800) 777-4244  
Fax (800) 336-5948  
(845) 572-3468  
www.CommunityPlaythings.com

### United Kingdom

Robertsbridge  
E. Sussex TN32 5DR  
Phone 0800 387 457  
Fax +44 (0)1304 843 731  
www.communityplaythings.co.uk  
sales@communityplaythings.co.uk



**community playthings**

# H507/H527/H824 Extra Magnetic Whiteboards

## Recommended use

These replacement magnetic whiteboards are intended for use with Community Playthings.

H507 for the Mini Art Island

H527 for the Art Island.

H824 for the Multi-Purpose Easel.

## ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

## Assembly

Equipment comes in a single carton containing:

1 whiteboard

If your shipment is incomplete, please call your Customer Center.

1. Place the bottom edge of the whiteboard panel in the green hooks.
2. Secure the panel by screwing in the white clips to catch the top edge or the sides according to the orientation of the board. See Figure 1. There are right-hand and left-hand clips. A clip is on the correct side (left or right) of the easel when the the lip points down.

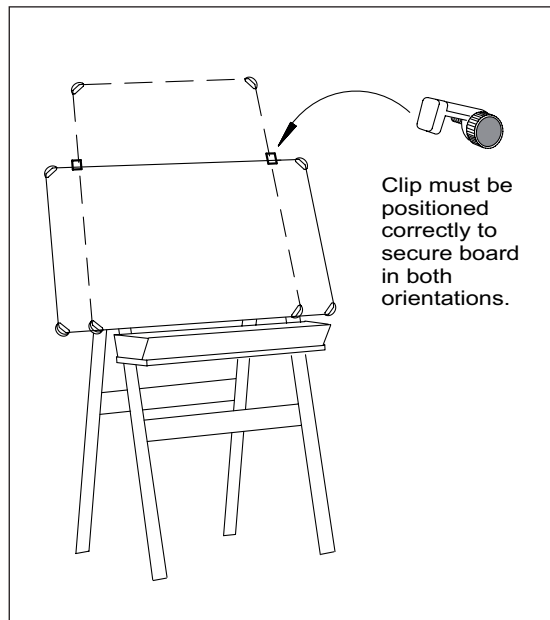


Figure 1

## Adjustments

Re-orient the whiteboard by loosening the knobs, rotating the panel 90°, re-positioning the clips, and tightening their knobs.

To re-position the panel at a different height, remove the panel. Lift the shelf assembly off and hang it on the other cross-piece. Replace the panel and attachment clips. You may need to re-locate the clips to their other holes on the sides of the legs.

## Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

## Cleaning

The whiteboard can be cleaned using a soft dry cloth.

If the ink has been left on for a long time, rub clean with a dry cloth and then use a cleaner recommended by the supplier of your whiteboard markers or a non-abrasive general purpose cleaner. Stubborn stains may need some extra effort to remove completely. Wipe off residual paint with warm water.

## Do not immerse whiteboards in water.

Abrasive cleaning agents will damage the whiteboard surface.

Steel magnets may scratch the whiteboard.

## Construction

The whiteboards are steel with a foam core.

## User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

## Ordering parts

To order replacement parts, contact your Customer Center with a description of the part(s) needed.

**Use only replacement parts supplied by Community Playthings.**