

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

CUSTOMER CENTRES

United States

359 Gibson Hill Road
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

Fax +44 (0)1304 843 731

www.communityplaythings.co.uk

sales@communityplaythings.co.uk



community playthings

J20 Nursery Stool

Recommended Use

The J20 Nursery Stool has been designed to provide comfortable seating for children between the ages of 1 to 2 years old.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

- ▲ For indoor use only. The Nursery Stool is not waterproof.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wipe the wood parts with a damp cloth and a mild detergent. Do not use excessive water.

Construction

The wooden components are manufactured from solid birch and finished with a clear lacquer. All edges and corners are rounded for safety and ease of cleaning.

User Modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact your Customer Center with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

