

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:
Keep instructions for future use.



CUSTOMER CENTERS:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

United Kingdom

Robertsbridge
E. Sussex TN32 5DR
Phone 0800 387 457
Fax +44 (0)1304 843 731
www.CommunityPlaythings.co.uk
Sales@CommunityPlaythings.co.uk



Recommended use

Designed to support the active and cooperative play needs of groups of children.

R301: 2 to 5 years, weight limit 70 lbs, 32 kg

R302: 4 to 8 years, weight limit 100 lbs, 45 kg

⚠ WARNINGS

- ▲ This product is intended for use by children of immature judgement and therefore adult supervision is required at all times.
- ▲ Use only on level ground or indoors. Do not use near steps, sloped driveways, roads, alleys or swimming pools.
- ▲ Always wear helmet and shoes when riding scooters.

Assembly

Scooters come completely assembled.

Maintenance

Keep indoors or under cover when not in use.

Periodically inspect for broken or loose parts. Remove the product from service when any condition develops that might make operation unsafe.

R301 Starter Scooter R302 Scooter

Construction

Finish is a tough baked-on powder coating.

Frames are constructed of welded steel tubing.

Steering has long-wearing Delrin plastic bushings at the top and bottom of the head tube and internal oversteer protection.

Wheels are light rugged spoke free polypropylene. The solid tires are soft and rubbery but cannot be punctured. They spin on precision ground sealed ball bearings.

R301 Foot Board is made of durable, slip resistant, all weather, ABS plastic.

R302 Foot Board is 3/8" high strength, light weight, slip resistant plastic.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.



R301 Starter Scooter



R302 Scooter